



Identifiering av olika lastarfästen



Trima / SMS

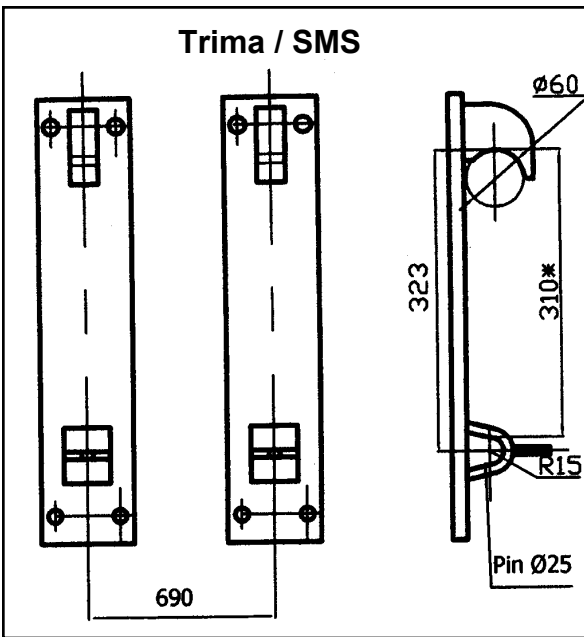


Stora BM

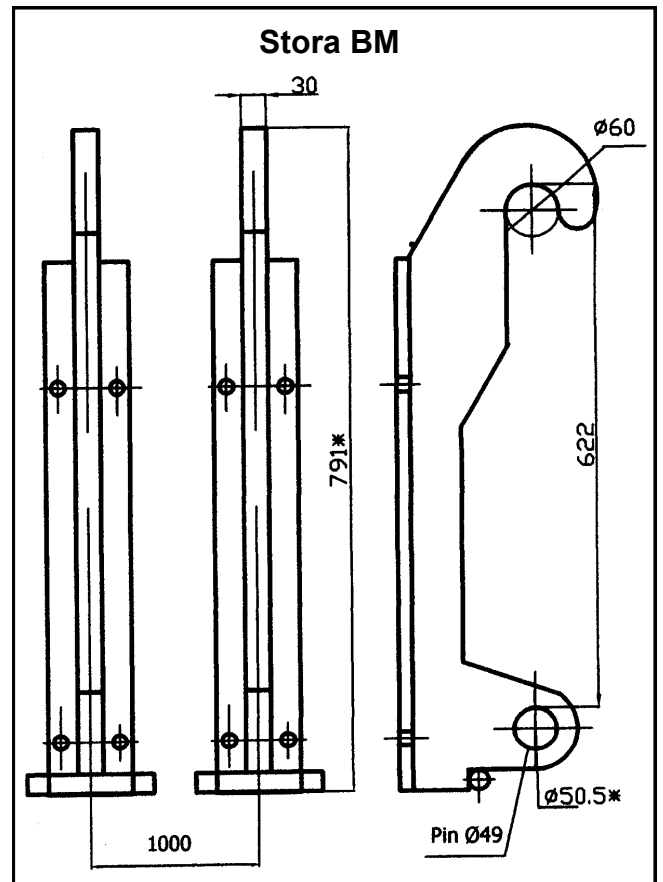


Lilla BM

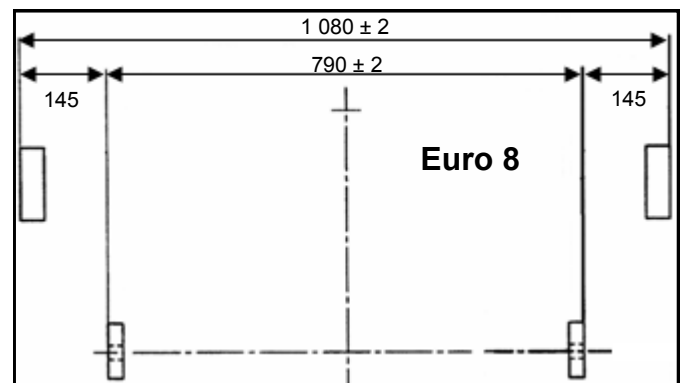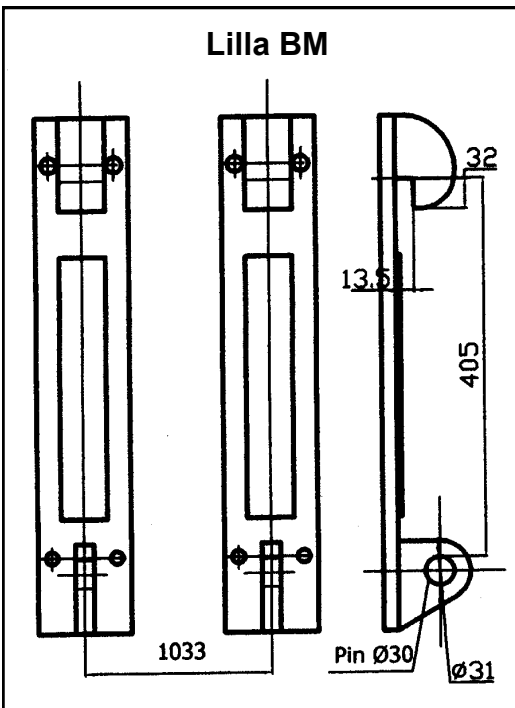


Älö Typ 3

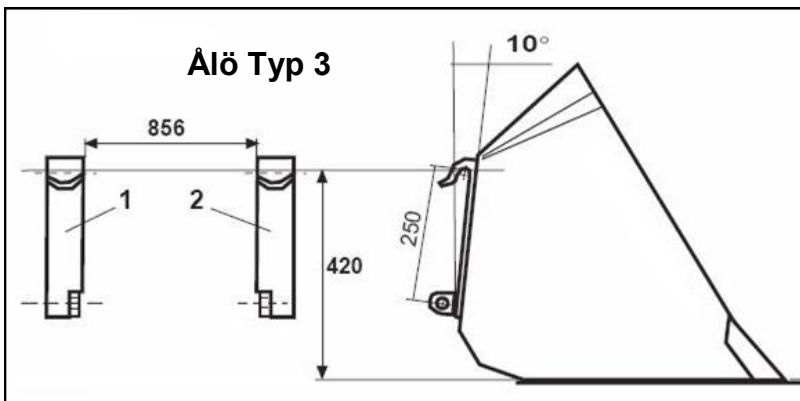


Faresin
KTSF530

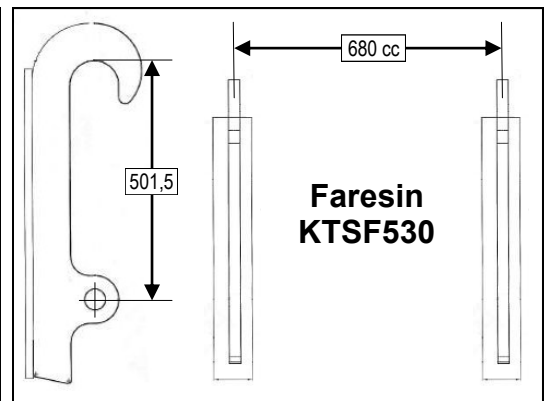


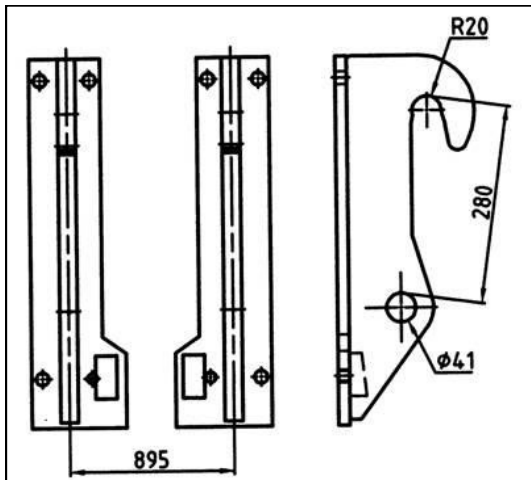


KTSF505 Passar till **Kramer**

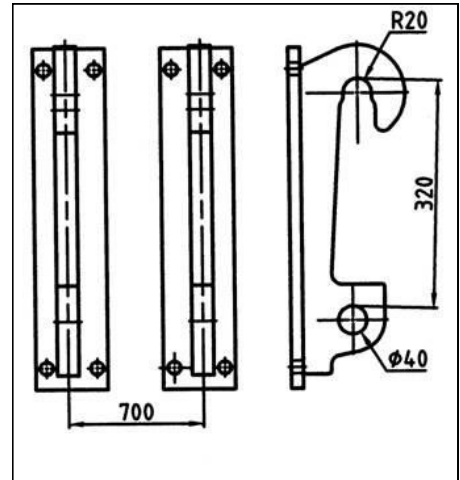


KTSF500 passar till **Weidemann**

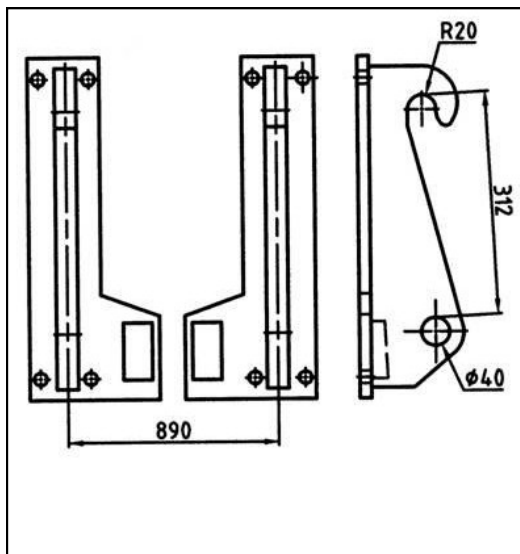


KTSF501 passar till **Volvo Zettelmeyer**
L30Z L32Z L35Z

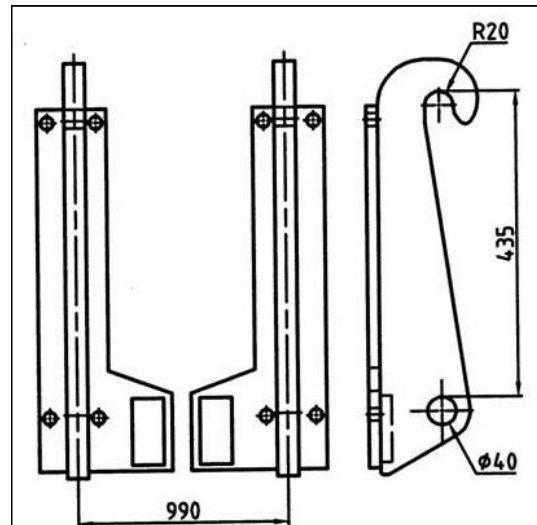


KTSF502 passar till **Volvo Zettelmeyer**
L35TPZ L40TPZ L45TPZ

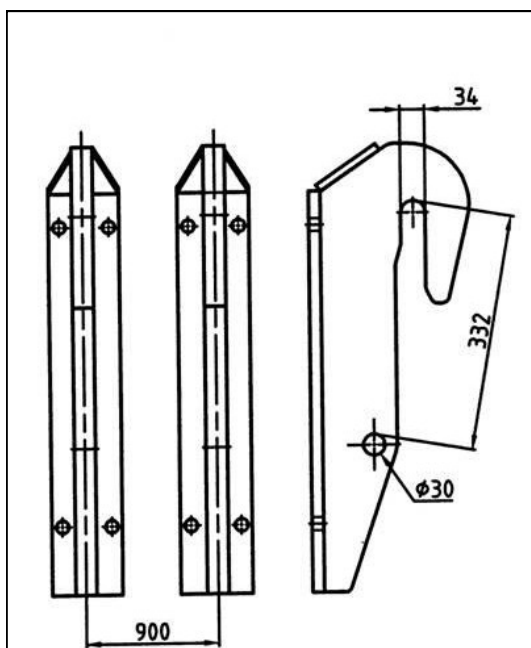

KTSF503 passar till **Terex**

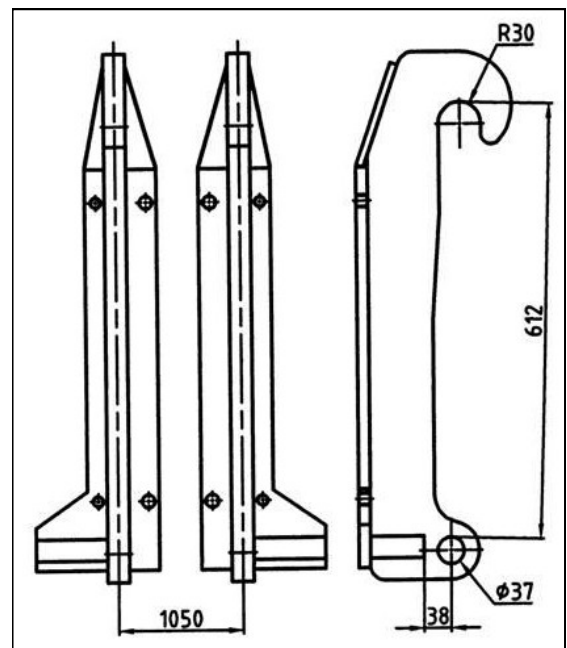

KTSF504 passar till **JCB**

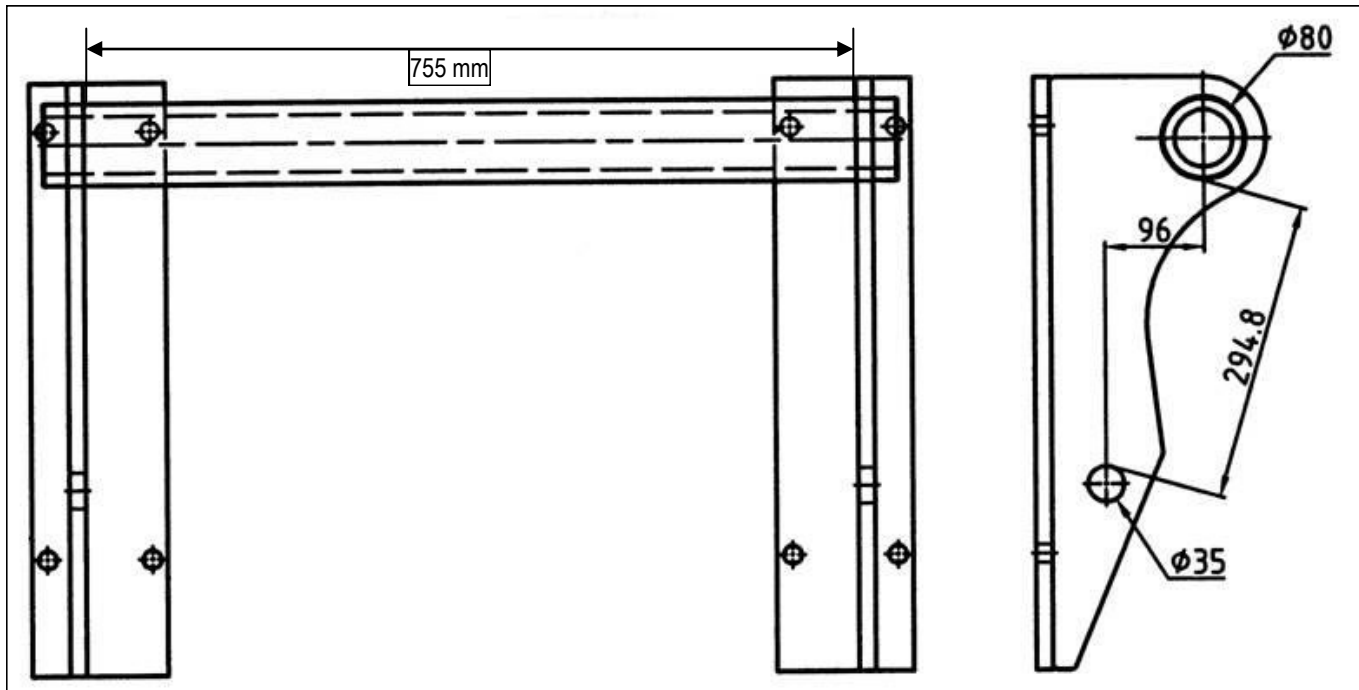


KTSF507 passar till **Manitou**

MLT 526 SA+SB
 MLT 731 SB
 MT 932 T S1+SA+SB
 MT 1235 S S2

MLT 630 SB
 MLA 628 T S1+S2+S3
 MT 1033 HLT S1+S2
 MT 1335 SL S3+HS2

MLT 634 SB
 MT 732 T S1+SA+SB
 MT 1030 S S1+S2
 MT 635 S1+S2+S3

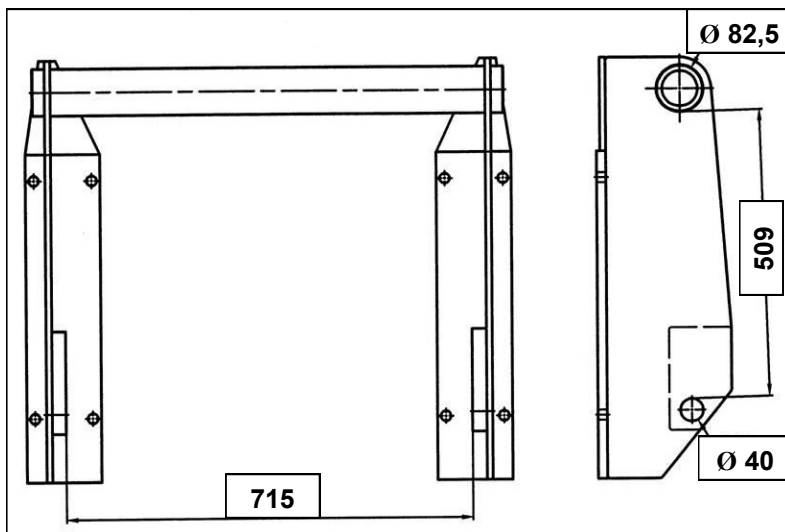

KTSF506 passar till **Bobcat**

518
 623